

Device Cleaning Instructions

Touchscreen phones (iPhone, Lumia, Samsung, etc.)

- Unplug all cables and turn off the phone.
- Use a soft, slightly damp lint-free cloth.
- Avoid getting moisture in any openings.
- Do not clean iPad using window cleaning solutions, house cleaning products, aerosol spray, solvents, alcohol, ammonia, or abrasives.
- You can swipe off fingerprints from the screen using a soft lint-free cloth.

Tablet

- Power off the computer and unplug the power module.
- Swipe clean the outer surfaces using a soft and damp lint-free cloth.
- Avoid getting moisture in any openings.
- Do not spray liquids directly onto the computer.
- Do not use aerosol spray, solvents, or abrasives which may damage the surface.

MacBook (display)

- Power off the computer and unplug the power module.
- Dampen the provided cleaning cloth with plain water and swipe the display.
- Do not spray liquids onto the display.

On MacBook bottom (13 inch, end of 2009, mid 2010) there is soft nons lipping material. Use 3M grey microfiber cloth or soft, colorfast lint-free cloth to clean out the bottom.

Laptops (cooling)

- A common cause for overheating in laptops is accumulation of dust inside the computer. Dust can block air passages resulting in the fan running on high speed all the time.
- Air passages can be cleared using a compressed air can. Compressed air must be blown in all air passages to make air flow and to keep dust settling on components.